

# 14 - Dimensions, designs, mounting positions of bevel helical gearmotors


## Mounting positions

Unless otherwise stated, gear reducers are supplied in mounting position **B3** (see ch. 2).

### MR C3I 50 ... 125

Designs:

- U03A
- U03Asin
- U03D
- U03Dsin

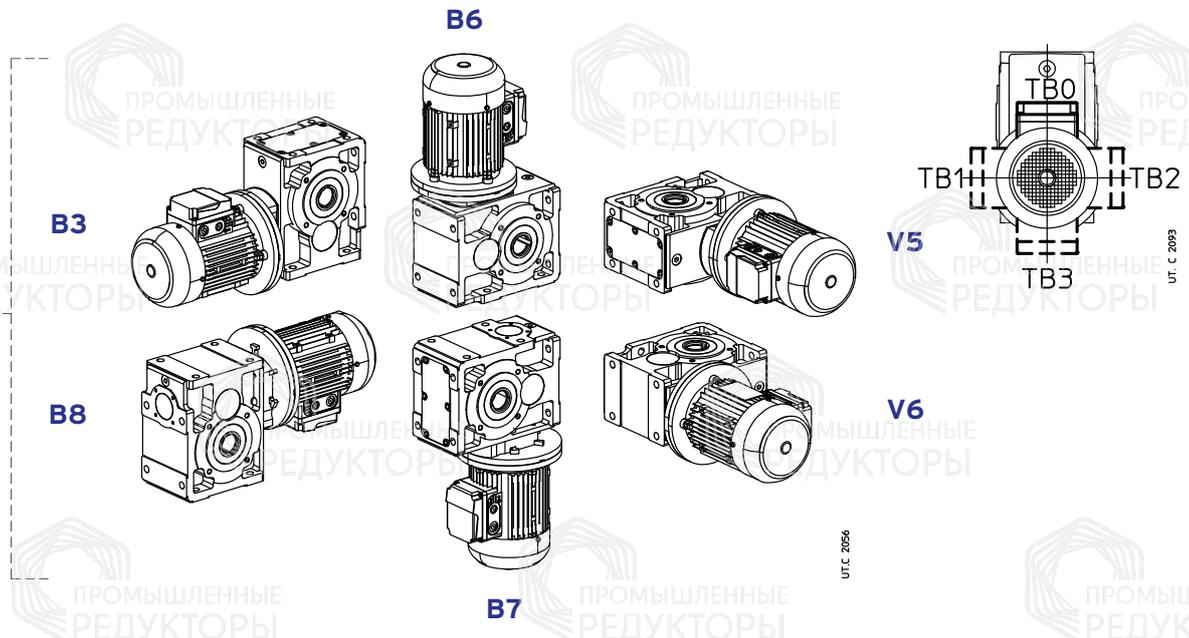

## Oil quantity MR C3I 50 ... 125


Lubricant quantities [l] stated are approximate for provisioning. The exact oil quantity the gear reducer is to be filled with is defined by the level plug.

Mounting position	50	63, 64	80, 81	100	125
<b>B3</b>	0,5	1,2	1,9	3,3	6,4
<b>B8</b>	0,7	1,4	2,5	4,5	9,5
<b>B7</b>	0,5	1,2	1,9	3,3	6,4
<b>B6</b>	0,9	1,8	3	6,3	12,8
<b>V5</b>	0,55	1,35	2,3	4,1	7,5
<b>V6</b>	0,55	1,35	2,3	4,1	7,5

# 14 - Dimensions, designs, mounting positions of bevel helical gearmotors

## Lubrication details

MR C3I 100 ... 125

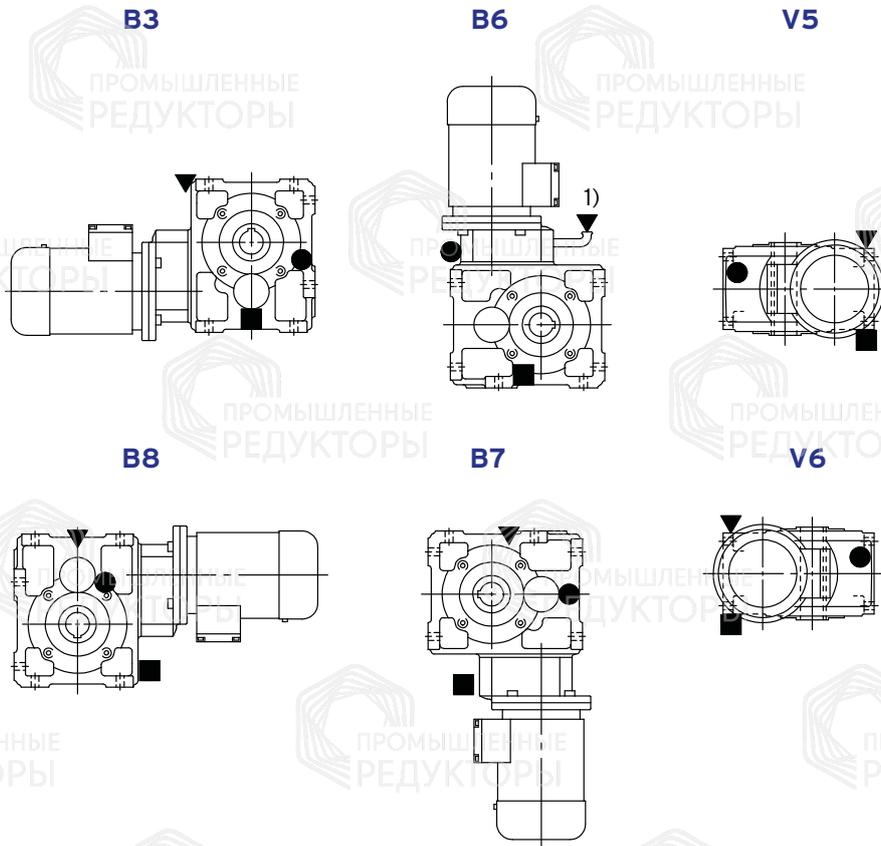

Designs:  
**U03A**  
**U03Asin**  
**U03D**  
**U03Dsin**

1) See also ch. 6 page 43.

- ▼ oil filler plug
- oil level plug
- oil drain plug
- ▼ oil filler plug on opposite side (not in view)
- oil level plug on opposite side (not in view)
- oil drain plug on opposite side (not in view)